

ROCKVILLE

GlideTone

VINTAGE STYLE PORTABLE &
HOME BLUETOOTH SPEAKER

OWNER'S MANUAL

 
ATTENTION:
WATCH THIS VIDEO BEFORE FIRST USE!

Who reads manuals?

Scan the **QR code** or go to **rockvillesupport.com/glidetone** to access how-to video(s), the owner's manual, and other important information you may need to get the most out of your item.

If you prefer written instructions, please read ahead!

With Rockville you get many options.

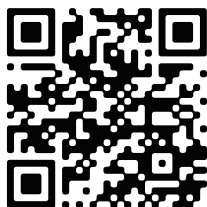

Missing items? If you ordered a bundle that includes more than one product and you are missing part of your bundle then it just means your order shipped from two different warehouses. You will receive the remaining items very soon. If you have any concerns or inquiries, feel free to call our customer support center at 1-646-758-0144, 24 hours a day/7 days a week.

Thank you for purchasing this Rockville GlideTone portable wireless streaming speaker. Please read this guide carefully for proper use of your GlideTone. Should you need technical assistance please call our technical help line at 1-646-758-0144, 24 hours a day, 7 days a week.

Included

- 3.5mm to 3.5mm AUX cable
- USB-C to USB-A Charging Cable
- Owner's Manual

 
IMPORTANT SAFETY INSTRUCTIONS

 


- To reduce risk of electric shock, never open the unit. There are no serviceable parts; refer service to the Rockville service center.
- Do not expose this unit to any kind of moisture.
- Make sure the unit is placed on a level and stable surface.

Functions

1. Bass +/-: Turn left or right to decrease or increase the bass level.
2. Previous/Next: Press to skip backwards or forwards through tracks
3. Mode: Short press to select input mode (BT/USB/TF/AUX). Long press to disconnect wireless streaming device. In AUX mode, press to mute.
4. Power, Play/Pause: Long press to power on or off. Short press to pause or resume music playback. In AUX mode only, press to mute playback.
5. TWS: Press to initiate TWS pairing (see TWS pairing section)
6. Microphone
7. Volume +/-: Turn left or right to decrease or increase the volume.
8. Passive radiators
9. Carrying handle
10. USB input (Accepts thumb drives up to 64GB)
11. 3.5mm Aux input
12. LED indicator: Indicates when the unit is in TWS mode, Wireless streaming mode, and when it is charging. Please note that in any mode, the LED indicator will slowly flash blue, indicating that the unit is on. When the unit is off, or not charged, the LED indicator will be off.
13. USB-C power input
14. TF card slot

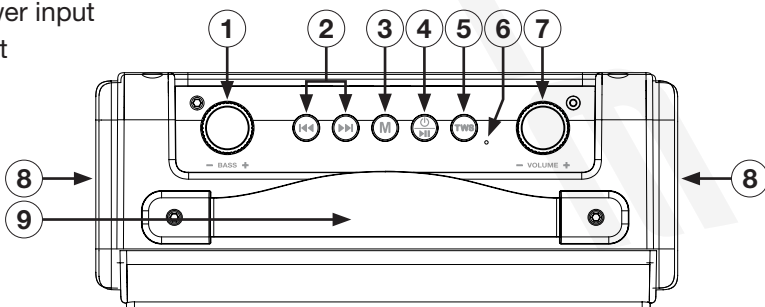

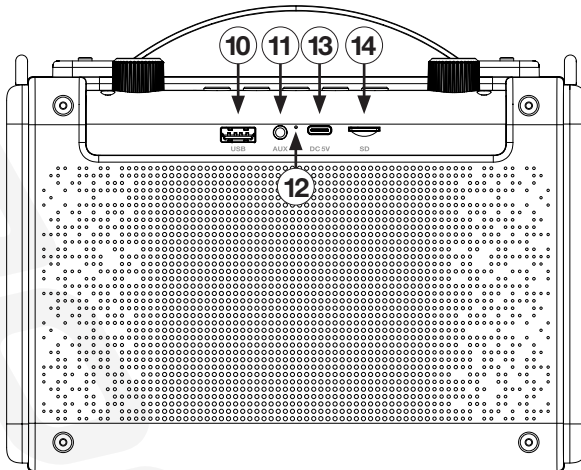

Wireless Streaming Pairing

1. When powered on, the unit will automatically go into pairing mode and the LED indicator will rapidly flash blue. If the unit is in another mode, press the Mode button until you reach wireless streaming mode.
2. Ensure your device is in “Bluetooth” mode and under the list of available devices search for and select GlideTone. Upon pairing, the LED indicator will slowly flash blue.
3. Long press the Mode button to force unpair a previously paired device.

Music Playback

1. Use the Previous/Next buttons to select the previous or next track.
2. Use the volume knob to control volume. Please note, the unit’s volume control will not sync with your streaming device’s volume control nor will the bass knob. They must be adjusted separately.
3. Use the Play/Pause button to pause or resume audio playback. Alternatively, you can use your streaming device’s controls.

If after 10 minutes the unit is unable to pair, it will power down automatically in order to conserve battery life.

TWS Input Pairing

1. Make sure your Glide Tone units are on and not connected to any wireless streaming devices. If adding a second unit to one that is already connected, you do not have to disconnect from the input device.
2. Double press the TWS button on one of the units. Each one will play a prompt and their corresponding the LED indicator will rapidly flash blue. indicating that they are in the process of pairing.
3. Upon pairing, both units will play a prompt and their corresponding LED indicators will rapidly flash blue .
4. Once they are paired, ensure your device is in “Bluetooth” mode and under the

list of available devices search for and select GlideTone. If you are pairing to a previously connected unit you can skip this step.

5. Double press the TWS button on either one of the units to exit TWS pairing.

Music Playback

1. Use the Previous/Next buttons to select the previous or next track.
2. Use the volume knob to control volume. Please note, the unit's volume control will not sync with your streaming device's volume control nor will the bass knob. They must be adjusted separately.
3. Use the Play/Pause button to pause or resume audio playback. Alternatively, you can use your streaming device's controls.

If after 10 minutes the unit is unable to pair, it will power down automatically in order to conserve battery life.

USB Input

1. Connect a USB drive in any mode and the unit will automatically switch to USB playback.
2. Use the Previous/Next buttons to select the previous or next track.
3. Use the volume knob to control volume.
4. Use the Play/Pause button to pause or resume audio playback.
5. Accepts thumb drives with a capacity no greater than 64GB and the following file types: MP3, WMA, FLAC, and WAV.

TF Input

1. Inserting a TF card into the TF card slot in any mode and the unit will automatically switch to TF playback.
2. Use the Previous/Next buttons to select the previous or next track.
3. Use the volume knob to control volume.
4. Use the Play/Pause button to pause or resume audio playback.
5. Accepts TF cards with a capacity no greater than 64GB and the following file types: MP3, WMA, FLAC, and WAV.

Charging

Be sure to charge the speaker fully prior to first use. Charge time is 5.5 hours. Battery life is 18 hours at low volume and 5.3 hours at max volume.

1. When the battery is low, the unit will play a low battery prompt. When the battery is too low, the unit will automatically shut down.
2. Connect the charging cable to an electric outlet or any 5V USB port and connect the other end (USB-C) to the USB-C power input on the unit.
3. While charging, the red LED indicator will be on. Once the unit is fully charged, the LED will be off.
4. If the unit will remain powered down for long periods of time, be sure to charge it at least twice a month to maintain battery life.

Hands-Free Calling

1. Press the Play/Pause button to answer calls.
2. During the call, press Pause/Play to hang up.
3. Double press the Pause/Play button to reject an incoming call.

FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Responsible party name: Rockville

Address: 600 Bayview Ave,
Entrance A,
Inwood, NY 11096


Hereby declares that the product Rockville GlideTone complies with FCC rules as mentioned in the following paragraph:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ROCKVILLE

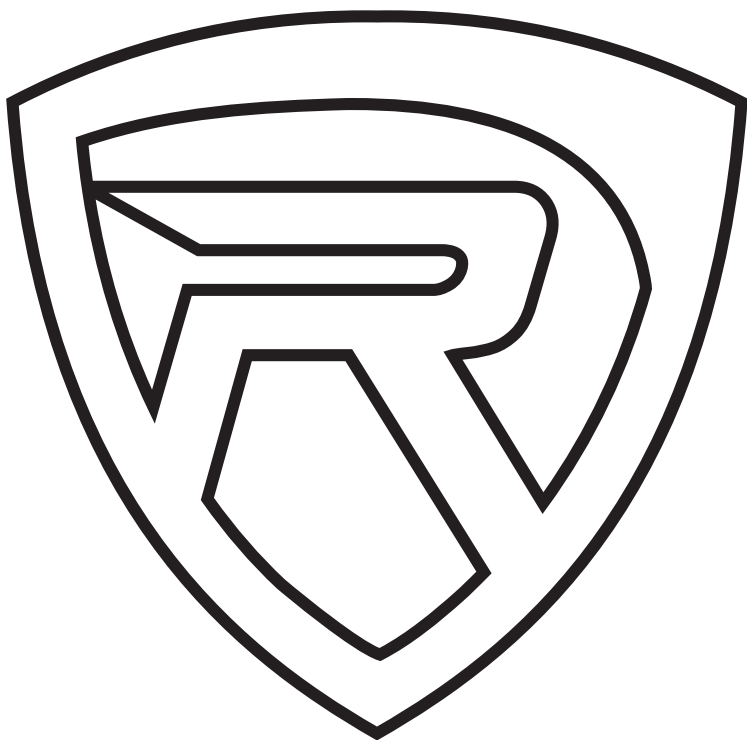

RockvilleAudio.com

© 2025 ROCKVILLE // Features and specifications are subject to change and/or improvement without notice.