

# ROCKVILLE

*Elite Series*

**HD5/HD5B**  
**5" POWERED MONITORS/BOOKSHELF**  
**SPEAKER SYSTEM w/BLUETOOTH**

## OWNER'S MANUAL


**ATTENTION:**  
**WATCH THIS VIDEO BEFORE FIRST USE!**

### *Who reads manuals?*


Scan the **QR codes** or go to the **URLs** to access how-to video(s), the owner's manual, and other important information you may need to get the most out of your item.

**If you prefer written instructions, please read ahead!**

*With Rockville you get many options.*

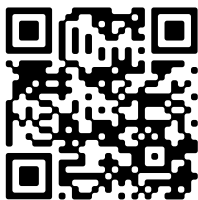

rockvillesupport.com/hd5

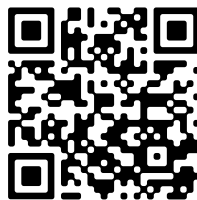

rockvillesupport.com/hd5b

**Missing items?** If you ordered a bundle that includes more than one product and you are missing part of your bundle then it just means your order shipped from two different warehouses. You will receive the remaining items very soon. If you have any concerns or inquiries, feel free to call our customer support center at 1-646-758-0144, 24 hours a day/7 days a week.

ROCKWELL

Thank you for purchasing this Rockville HD5 powered home theater system. Please read this installation guide carefully for proper use of your Rockville HD5 powered home theater system. Should you need assistance, please call our technical help line at 1-646-758-0144, 24 hours a day/7 days a week.

## INCLUDES

- Two Speakers
- Remote Control
- RCA to AUX cable
- Owner's manual
- Warranty card
- Two grilles

---

## IMPORTANT SAFETY INSTRUCTIONS



**TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE AMPLIFIER PLATE. NO USER SERVICEABLE PARTS INSIDE. REFER TO THE ROCKVILLE SERVICE CENTER FOR ANY REPAIRS.**

---


- Do not place these speakers on an unstable surface. The speaker may fall over, causing serious injury to a child or adult and serious damage to the unit.
- Do not use these speakers near water; for example, near a bathtub, sink, in a wet basement, or near a swimming pool.
- The speakers should be situated away from heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- These speakers should be connected to a power supply outlet of the same voltage as that which is specified on the amp plate of the unit. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits from the unit.
- Clean only with a soft damp cloth. Unplug this product from the wall outlet before cleaning.

## FRONT of UNIT/REAR PANEL (MASTER UNIT)



1. Multifunction control knob (Standby/Active Input Selection/Volume)
2. LED Function/input indicator:
  - RED - standby function
  - BLUE - Bluetooth function
  - PINK - USB function
  - GREEN - AUX 1 input
  - LIGHT GREEN - AUX 2 input
  - WHITE - Digital coaxial audio input
  - YELLOW - Digital audio optical input
3. USB input
4. 3.5mm Stereo AUX 1 input
5. 3.5mm Stereo AUX 2 input
6. Optical input
7. Coaxial input
8. Output to right speaker
9. Power input

## REMOTE CONTROL FUNCTIONS (inset)

1. Preset EQ: music, movie, news, 3D
2. BT/USB playback controls:
  - stop (USB only)
  - ▶ play/pause
  - ▶▶ next track
  - ◀◀ previous track
3. Standby
4. Select input source: BT, USB, AUX1, AUX2, COAX, OPTICAL
5. Press and hold to reset treble, bass, and volume settings. The preset EQ will reset to "MUSIC."
6. Press and hold to unpair the unit from a connected Bluetooth capable device. Upon successfully disconnecting, you will hear a beep. Press and hold the button to reconnect to the last paired Bluetooth device. Once paired, you will hear a beep.
7. Treble +/-
8. Bass +/-
9. Volume +/-
10. Mute

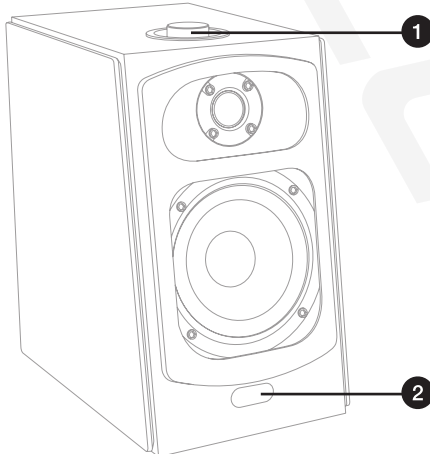

# LEFT SPEAKER

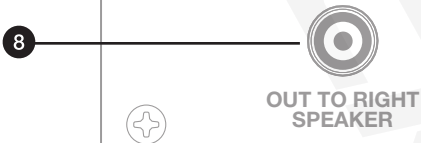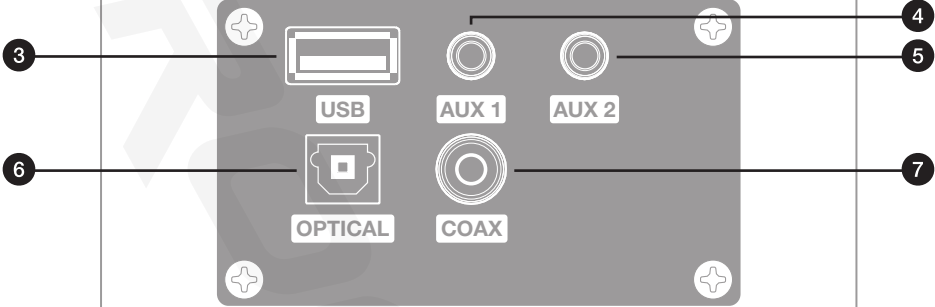


**CAUTION**  
RISK OF ELECTRIC SHOCK!  
DO NOT OPEN!  
**ATTENTION**  
RISQUE DE CHOC ELECTRIQUE!  
NE PAS OUVRIR!



HD5




DESIGNED AND ENGINEERED IN THE USA, MEXICO

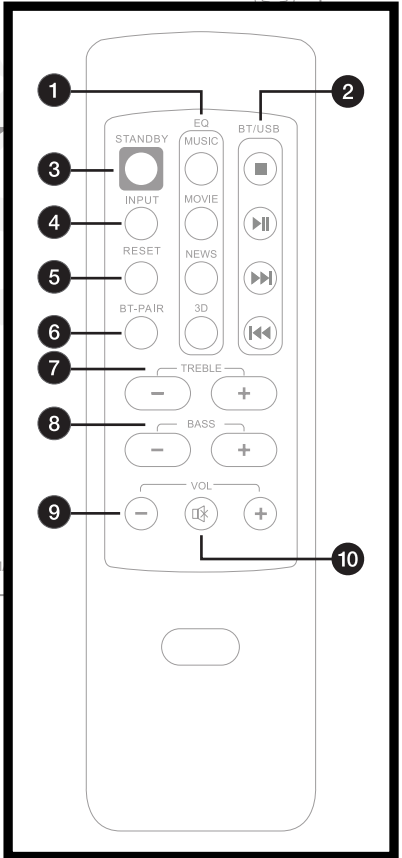

## SET UP

Connect the passive speaker (right) to the port marked "OUT TO RIGHT SPEAKER" on powered speaker (left) . Now plug the master unit to the nearest AC outlet.

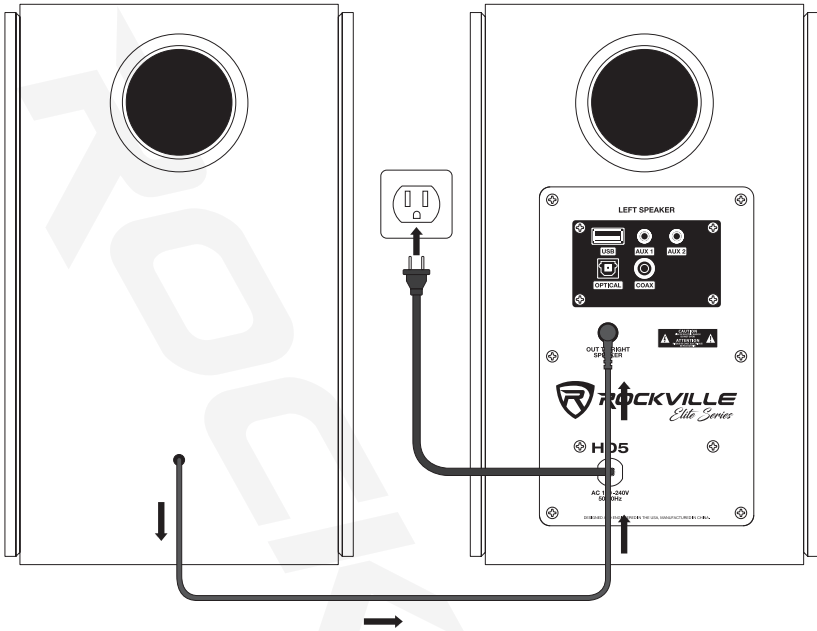

## STANDBY MODE

1. Push the multifunction control knob on top of the left unit or the STANDBY button on the remote control to activate the speakers.
2. To place the unit into STANDBY mode, press and hold the multifunction control knob for a few seconds or press the STANDBY button on the remote control.

## VOLUME CONTROL/MUTE FUNCTION

The volume can be adjusted by turning the multifunction control knob or by pressing the VOLUME +/- buttons on the remote control. The LED function/input indicator on the front of the unit will flash during the adjustment.

To activate the mute function, simply press the MUTE button on the remote control. The LED function/input indicator will flash indicating that the unit is muted. To exit the mute function press the MUTE button again.

## TREBLE/BASS/PRESET EQ

1. Treble: Press the TREBLE +/- buttons on the remote to make adjustments. This will increase or decrease how bright the speaker sounds.
2. Bass: Press the BASS +/- buttons on the remote to make adjustments. This will increase or decrease the level of low frequency the speaker will play.
3. The LED indicator will flash while adjustments are being made and remain solid when adjustments are complete.
4. To activate preset EQs press one of the four keys on the remote under the EQ section. To reset the unit to the default sound setting, press and hold the reset button for a few seconds.

## BLUETOOTH

To connect your iPod, iPhone, MP3 player, Android phone or any other Bluetooth capable device follow the steps listed below.

1. Make sure the unit is plugged in and the powered on. Press the multifunction control

knob several times or press the INPUT key on the remote several times until the indicator LED is blue.

2. You will hear a beep and the LED will begin to blink rapidly when the unit enters pairing mode.
3. Turn on the Bluetooth feature on your device and ensure that it is in “discoverable” mode. Search for “Rockville HD5” on your list of available devices and select it.
4. You will hear a beep and the LED will remain solid blue upon successful pairing.
5. Use the buttons on the remote to control music playback.
6. During playback the status LED indicator will be blue. When the mute function is activated, the indicator will flash blue.
7. Playback can be controlled via the BT device or the HD5's playback controls. Please note, the unit's volume controls do not sync with the BT device's volume controls. They work independently of each other. Adjust volume via the BT device itself and by turning the multifunction control knob on the unit or by pressing the VOLUME -/+ buttons on the remote control.

## **USB**

For USB playback follow the steps listed below. Please note, due to the incompatibility of some processors this unit may not support some USB drives. The unit supports the MP3 format.

1. Plug in your USB flash drive.
2. Make sure the unit is plugged in and powered on. Press the multifunction control knob several times or press the INPUT key on the remote several times until the indicator LED is pink.
3. After a few seconds the unit will automatically read the files and begin playback.
4. Use the buttons on the remote to control music playback.
5. During playback the status LED indicator will be pink. While the music is paused the indicator will flash pink.
6. Adjust the volume by turning the multifunction control knob or by pressing the VOLUME -/+ buttons on the remote control.

Please note, if a USB flash drive is connected while the unit is powered on, it will automatically read the files on the drive and begin playback.

## **AUX-IN 1/AUX-IN 2**

Use the 3.5mm AUX-IN jacks to connect computers, cellphones, or any other external sound source with a RCA or 3.5mm output.

1. Plug in any device with an RCA or 3.5mm output to either of the AUX-IN inputs using a 3.5mm to RCA cable (included) or a 3.5mm to 3.5mm cable (not included).
2. Make sure the unit is plugged in and the powered on. Press the multifunction control knob several times or press the INPUT key on the remote several times until the indicator LED is green (AUX 1) or light green (AUX 2).
3. Use the external device's functions to control music playback. Adjust volume via the external device and by turning the multifunction control knob on the unit or by pressing the VOLUME -/+ buttons on the remote control.

## **COAXIAL DIGITAL AUDIO INPUT**

Use the COAXIAL input to connect a TV or other external sound source with a coaxial output.

1. Connect a TV or other source device to the input marked COAX using a coaxial cable.
2. Make sure the unit is plugged in and the powered on. Press the multifunction control knob several times or press the INPUT key on the remote several times until the indicator LED is white.
3. Adjust the volume by turning the multifunction control knob or by pressing the VOLUME -/+ buttons on the remote control.

## OPTICAL DIGITAL AUDIO INPUT

Use a digital optical cable to connect a TV or other external sound source with an optical output.

1. Connect a TV or other source device to the input marked OPTICAL using an optical cable. Please note, some TVs and devices require that the optical output feature be enabled within their respective sound settings.
2. Make sure the unit is plugged in and the powered on. Press the multifunction control knob several times or press the INPUT key on the remote several times until the indicator LED is yellow.
3. Adjust the volume by turning the multifunction control knob or by pressing the VOLUME +/- buttons on the remote control.

## FEATURES HD5

- 5" Woofer and 0.75" tweeter in each speaker
- 600 Watts Peak /150 Watts RMS
- Audiophile-grade ultra-stiff paper woofer cone w/polypropylene dust cap
- Silk dome tweeter
- Built-in Digital class "D" amplifier with advanced digital sound processor
- Built-in Bluetooth (Version: 4.2+EDR) with 33 foot range
- Built-in USB playback (16GB max storage)
- 2 Aux input ports allow you to connect the speakers to your TV, phone, or any other device
- 1 Optical (PCM) input port allows you to easily connect to your TV
- 1 Coaxial input port
- Multicolor LED function indicator
- Includes a beautiful fully functional remote control
- 4 preset EQ: Music, Movie, News, 3D
- Wood finish high-grade MDF enclosure (0.472" thick)
- Auto switchable power supply (110/240V) for use in the U.S. and Europe

## SPECIFICATIONS

- **Power Supply:** SMPS AC 110/240V~50/60Hz
- **Impedance:** Woofer is 6-ohm and the tweeter is 5-ohm
- **Frequency Response:** 50Hz – 20kHz
- **S/N Ratio:**  $\geq 72$ dB
- **THD:**  $\leq 0.5\%$ (1k/1W)
- **Input Sensitivity:** 500mV $\pm$ 50mV
- **Dimensions of each speaker:** 9.84" W x 10.83" H x 6.38" D
- **Net Weight (both speakers):** 13.90 lbs

## TROUBLESHOOTING

PROBLEM	SOLUTION
No power	<ol style="list-style-type: none"><li>1. Make sure the unit is plugged in.</li><li>2. Make sure the unit is not in Standby mode.</li></ol>
No sound	<ol style="list-style-type: none"><li>1. Make sure you've selected the proper source.</li><li>2. For all audio modes make sure that the volume control is set properly.</li><li>3. For Bluetooth/coax/optical/aux audio make sure that the source volume control is properly adjusted.</li></ol>
Bluetooth pairing fails	<ol style="list-style-type: none"><li>1. Check to see that both devices are turned on and that your Bluetooth device is discoverable.</li><li>2. Turn both devices off and then on again.</li><li>3. Make sure you've selected the proper source.</li><li>4. Make sure that the Bluetooth device is within 5 feet of the unit.</li><li>5. Move both devices away from other Bluetooth devices, microwaves, wireless routers, and other electronics.</li><li>6. Make sure that the unit is not paired to a previously paired device.</li></ol>
Files on USB memory device will not play back	<ol style="list-style-type: none"><li>1. Make sure you've selected the proper input source.</li><li>2. Make sure that the audio files are in the MP3 format.</li></ol>
No sound when receiving TV input	<ol style="list-style-type: none"><li>1. Select proper audio option from TV.</li><li>2. Make sure the proper input source is selected.</li><li>3. If using coax or optical cables, make sure that they are plugged into the output jacks of the TV and the input jacks of the speaker.</li></ol>

## FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Responsible party name: Rockville

Address: 600 Bayview Ave,  
Entrance A,  
Inwood, NY 11096

Hereby declares that the product Rockville HD5 powered home theater system complies with FCC rules as mentioned in the following paragraph:


This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ROCKWELL

***ROCKVILLE***

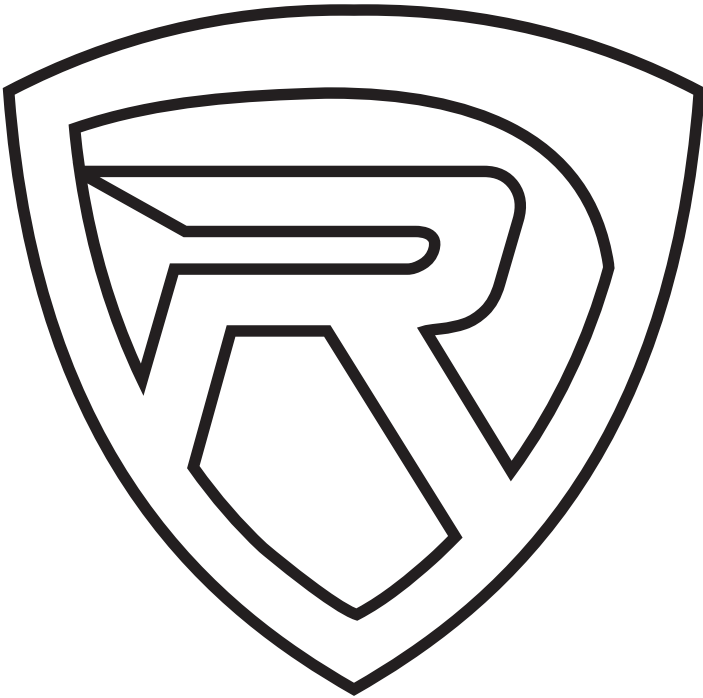

**RockvilleAudio.com**

© 2023 ROCKVILLE // Features and specifications are subject to change and/or improvement without notice.