

The R720LV2 features a wireless remote to control fog and LEDs. It has 4 buttons to control the different unit features:

Button 1: Strobe control: once the fog machine is operational, use this button to activate/deactivate the strobe function.

Button 2: Sound control: once the fog machine is operational, use this button to activate/deactivate the sound function. When this function is activated, the LEDs will be on as long as there is sound. When there is no sound, the LEDs will be off.

Button 3: Color control: once the fog machine is operational, press this button to choose the LED color. To lock the desired color, press the button again. To unlock the color, press the button again.

Button 4: Fog control: once the fog machine is operational, use this button to activate/deactivate the continuous fog function. The first preheat time is 3 minutes and will make 30 seconds of fog. The machine will then automatically continue to cycle between 30 second bursts and preheating. To deactivate the function, simply press button 4 again.

