

ROCKVILLE

RDJ2

2-CHANNEL DJ MIXER w/USB, TALK-OVER,
CUE MONITOR and 4 LINE INPUTS

OWNER'S MANUAL

ATTENTION: WATCH THIS VIDEO BEFORE FIRST USE!



Who reads manuals?

Scan the **QR code** or go to **rockvillesupport.com/rdj2** to access how-to video(s), the owner's manual, and other important information you may need to get the most out of your item.

If you prefer written instructions, please read ahead!

With Rockville you get many options.

Missing items? If you ordered a bundle that includes more than one product and you are missing part of your bundle then it just means your order shipped from two different warehouses. You will receive the remaining items very soon. If you have any concerns or inquiries, feel free to call our customer support center at 1-646-758-0144, 24 hours a day/7 days a week.

Thank you for purchasing this Rockville RDJ2BT Compact 2-Channel DJ Mixer. Please read this manual carefully for proper use of your mixer. Should you need assistance, please call our technical help line at 1-646-758-0144, 24 hours a day/7 days a week.

IMPORTANT SAFETY INSTRUCTIONS



 
- To reduce risk of electric shock, never open the unit. There are no user serviceable parts, refer service to the Rockville service center.
- Do not expose this unit to any kind of moisture.
- Please ensure that the unit is situated in a properly ventilated area.
- Make sure the unit is placed on a level and stable surface.

Features/Specifications

- Selectable Inputs for Channel 1 and Channel 2
- Adjustable high, low, and gain knobs on each channel
- Equalizer: Bass +12dB 60Hz/Treble +12dB 10kHz
- Channel 1 and 2 Cue monitor control
- Individual volume control
- Mic volume control
- Master volume control
- Channel 1 and 2 fader and cross fader
- Built in USB and MP3 player with LCD to play back tracks
- Talk-over: -16dB
- Distortion: $\leq 0.05\%$
- Signal/ Noise ratio: $> 80\text{dB}$
- 1 $\frac{1}{4}$ " Mic input
- 1 $\frac{1}{4}$ " Headphone output
- 4 RCA L/R Line inputs
- 1 RCA L/R Master amp output
- 1 RCA L/R Rec output
- You can ground your turntables to the mixer

Functions

1. Channel 1 input selector switch: Phono/Line 1 – Line 2
2. LCD display screen
3. USB input
4. MP3 controls: Play/Pause, Repeat, Previous, Next
5. Channel 2 input selector switch: Phono/Line 3 – Line 4 – MP3
6. Channel 1: a. Gain input control
b. High tone control: 12KHz ± 12 dB
c. Low tone control: 60Hz ± 12 dB
d. Microphone level control
7. Channel 2: a. Gain input control
b. High tone control: 12KHz ± 12 dB
c. Low tone control: 60Hz ± 12 dB
d. Headphone level control
8. Master volume control
9. Left/Right Stereo level display
10. Headphone source selector switch
11. Talkover On/Off selector switch
12. Channel 1 level control
13. Channel 2 level control
14. 1/4" Microphone input jack
15. 1/4" Headphone input jack
16. Crossfade slider

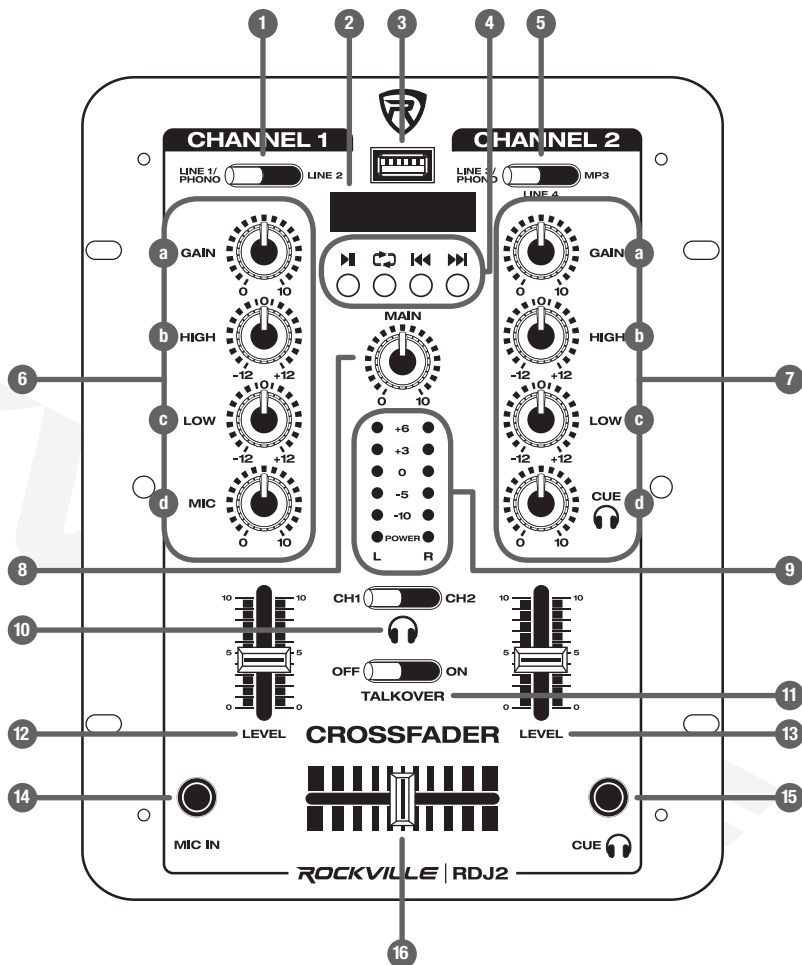

Functions

INPUTS:

LINE INPUT: Use these jacks for connecting stereo audio from any number of sources: mixing consoles, samplers, CD players, cassette decks, DAT machines, and other audio interfaces. Mono audio sources can be connected using an RCA “Y” cable connector.

LINE/PHONO INPUT: Use these jacks for connecting stereo audio from turntables, mixing consoles, samplers, CD players, cassette decks, DAT machines, and other audio interfaces. When connecting a turntable, make sure the input mode selector switch is in the PHONO position.

OUTPUTS:

1. **Master output, Left /Right:** use this output to connect to an amplifier or speaker system. The level of this output is controlled by the top panel knob labeled MAIN.

2. **Record output, Left /Right:** This output can be used to record to a computer, CD, MD, and tape recorder.

CHANNEL 2:

3. Line 4 input, Left /Right

4. Line 3/Phono input, Left /Right

5. Line 3/Phono input mode selector

CHANNEL 1:

6. Line 2 input, Left /Right

 
7. Line 1/Phono input, Left /Right

8. Line 1/Phono input mode selector

9. Ground connector

10. Power switch

11. AC 15V power input

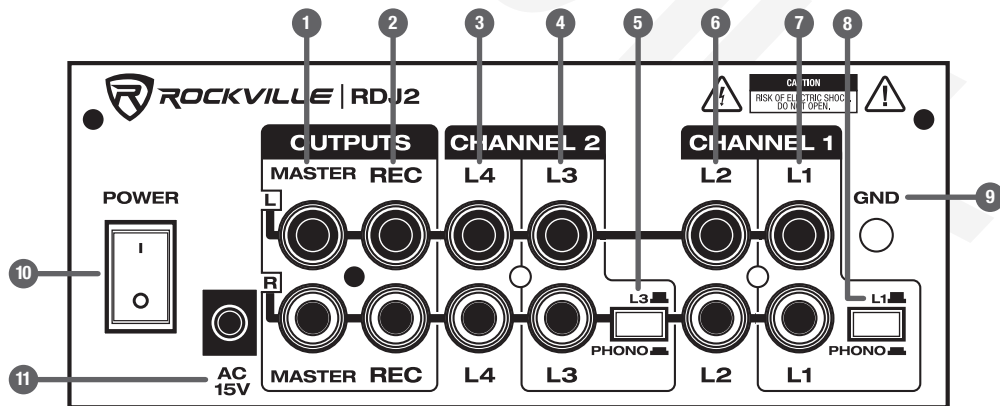

Trouble Shooting

NO SOUND:

1. Make sure unit is properly plugged into the wall outlet.
2. Check that power cable is properly plugged into the unit.
3. Ensure that the Channel input selector switch has been properly set.
4. Check the input GAINS, CHANNEL 1/CHANNEL 2 levels, and MAIN volume to make sure they are properly set.

NO SOUND – HEADPHONES:

1. Be sure your headphones are properly plugged in.
2. Check that the headphone level control (CUE), headphone channel selector () , and CHANNEL 1/CHANNEL 2 levels have been properly set.

MIXER NOISE:

1. Turn down all Microphone settings if none is in use.

MICROPHONE DOES NOT WORK:

1. Be sure your microphone is properly plugged in.
2. Make sure the MIC gain is properly set.

LINE INPUT DISTORTION:

1. Turn down the input GAIN controls and check EQ settings.

LINE INPUT/PHONO DISTORTION:

 
1. Make sure the LINE INPUT/PHONO selector switch is in the right position (PHONO for turntables, LINE for all other input sources).
2. Turn down the input GAIN controls and check EQ settings.

NOISE/HUM:

1. Make sure you are using good quality audio cables. We recommend Rockville Pro Audio cables.
2. Check the condition of your audio cables.
3. Keep cables away from other AC power cables as well as AC transformers.
4. Ensure that the unit is not too close to amplifiers, lighting power supplies or ballasts.
5. If possible, make sure that your turntables are properly grounded to the back of the mixer (GND).

FEEDBACK:

1. If a microphone is being used, make sure you are not too close to the speakers or headphones.
2. If there is feedback from the phono input, your turntables may be too close to the speakers or subwoofer. Make sure the turntable is on a surface free of vibration when the speakers are turned up.

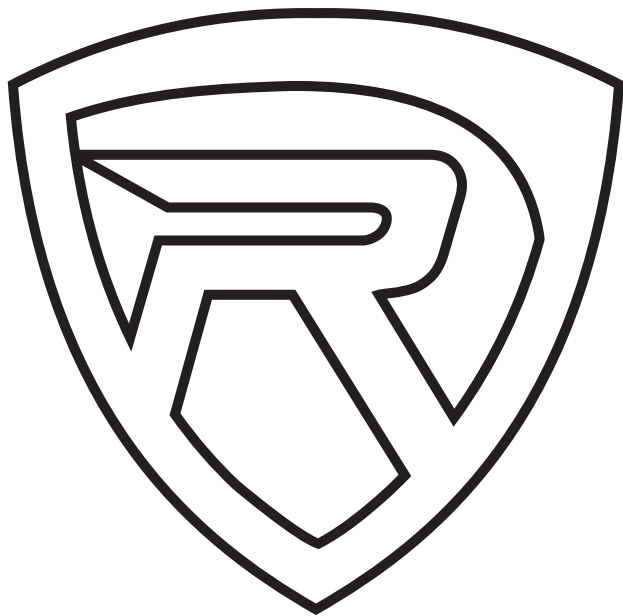

RockvilleAudio.com

© 2023 ROCKVILLE // Features and specifications are subject to change and/or improvement without notice.