

ROCKVILLE

RDJT6700

PRO DJ RACK MOUNT AM/FM DIGITAL
TUNER w/USB and SD INPUT

OWNER'S MANUAL

ATTENTION: WATCH THIS VIDEO BEFORE FIRST USE!



Who reads manuals?

Scan the **QR code** or go to **rockvillesupport.com/rdjt6700** to access the owner's manual, and other important information you may need to get the most out of your item.

If you prefer written instructions, please read ahead!

With Rockville you get many options.

 
Missing items? If you ordered a bundle that includes more than one product and you are missing part of your bundle then it just means your order shipped from two different warehouses. You will receive the remaining items very soon. If you have any concerns or inquiries, feel free to call our customer support center at 1-646-758-0144, 24 hours a day/7 days a week.

Thank you for purchasing this Rockville RDJT6700 Pro DJ AM/FM Tuner with USB and SD input. Read this owner's manual carefully for proper use of your Rockville RDJT6700. Should you need assistance, please call our technical help line at 1-646-758-0144, 24 hours a day/7 days a week.

IMPORTANT SAFETY INSTRUCTIONS

- To reduce risk of electric shock, never open the unit. There are no serviceable parts; refer service to the Rockville service center.
- Do not expose this unit to any kind of moisture.
- Please ensure that the unit is situated in a properly ventilated area.
- This unit can operate with either 110V or 220V. See item 14 on page 3.

TUNER PANEL DESCRIPTION

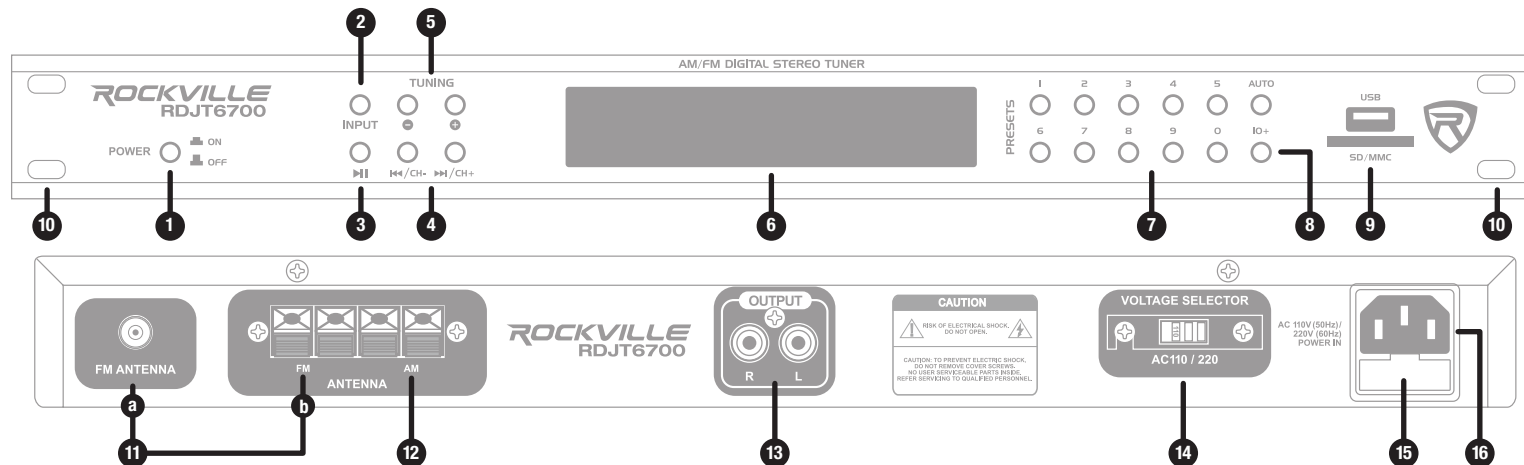

1. Power button

2. Input selector button (Tuner/USB/SD)

3. USB/SD play/pause button

4. USB/SD track selection/tuner preset selection button

5. Tuner scan/manual selection buttons

6. Vacuum Fluorescent Display

7. Radio mode: preset station selection buttons. USB/SD: Used to select tracks by file number.

8. Press to view programmed stations 11 – 40 (see the TUNER OPERATION section on page 4)

9. USB and SD/MMC ports

10. Rack mount points

11. FM Antennas: a. Coaxial antenna (not included) port
b. Wire antenna (included) ports

12. AM Antenna (included) ports

13. RCA Audio out

14. Voltage selector switch (110v/220v): For US owner's, set the selector switch to 110. For owner's outside of the US, refer to your electricity provider for your country's AC voltage.


Please note: Using the incorrect voltage may cause damage to the unit.

15. User serviceable fuse (see the FUSE REPLACEMENT section on page 5)

16. IEC AC power socket

REMOTE CONTROL FUNCTIONS

1. Direct frequency selection key. Push the key then use the number pad to select the desired station. For example, if you want to select the station 102.7FM Push the Select button then enter 10270 on the keypad.
2. Input select key. Allows you to cycle between AM/FM, USB and SD card input.
3. Tuning +/-: These keys allow the user to move through the stations in single increments.
4. Number pad: Used to select programmed stations, store stations, and directly select frequencies. Please note the 10 key can be used as the 0 key as well. It can also be used to directly select tracks in USB/SD mode.
5. Previous/Next buttons: In USB/SD mode only, move back or forward through tracks.
6. Play/Pause button: Play and pause USB/SD playback.
7. Mute key.
8. CH-/CH+: Press to select previous or next saved station.
9. Display brightness adjustment keys.
10. Spectrum display mode select keys.
11. Stereo/mono selection key (radio mode only).
12. Auto search stations and save presets.
13. Memory: Press this key to store desired stations.
14. VOL-/VOL+: Press to adjust the volume level. Press and hold to rapidly adjust volume.

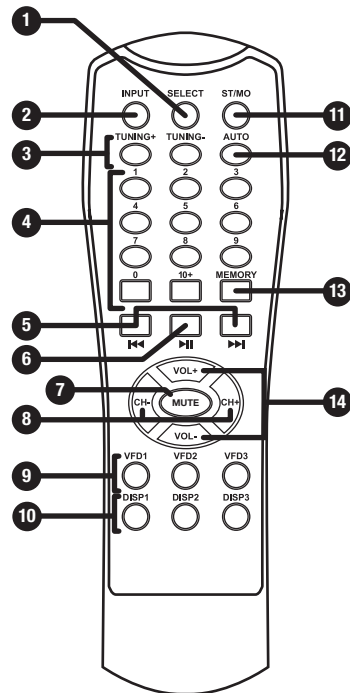

TUNER OPERATION

Auto Scan: Press and hold Tuner + or Tuner - button for two seconds to scan stations.

Manual Search: Quickly press Tuner + or Tuner - to search stations in single increments.

Programing Stations: Once you've located the desired station, press the MEMORY button on the remote control to save the station.

Selecting Programed Stations: Use number keys to select programed station. For numbers above 10, use the 10+ button. For example, to select programed station number 15, press the 10+ button and then the 5 button. To select programed station 28, press the 10+ button twice and then the 8 button. Use the same procedure for all other programed stations. Up to 40 stations can be saved. You can also use the CH- and CH+ keys on the remote control to toggle through the stations.

 
 
 
 
 
FEATURES / SPECIFICATIONS

- 19" Rack Mount AM/FM Receiver
- 40 AM/40 FM Preset Station Capability
- Vacuum Fluorescent Display
- SD/MMC Card Reader
- USB Port for MP3 Media Input
- Auto Search/Scan Feature
- 1 RU Rack Mount
- Full Function Remote Control
- Complete with AM and FM High Reception Antennas
- FM Frequency Range: 87MHz - 108MHz


- AM Frequency Range: 530kHz - 1620kHz
- Input Impedance: 1k Ohm
- Signal to Noise Ratio: FM >45dB, MW >40dB
- Sensitivity: FM >20uV, MW >5mV/m
- Pre-Amp Output Power: 500mW
- Power Consumption: 10 Watts
- 110/220 Volt Switchable Power Supply
- User Serviceable Fuse
- Dimensions: 18.7" x 2" x 9.5"

FUSE REPLACEMENT

Never replace the included fuse with one of larger value.

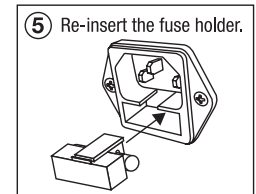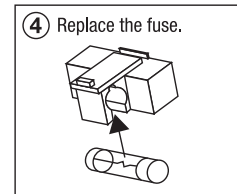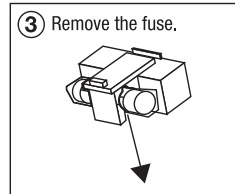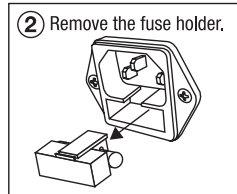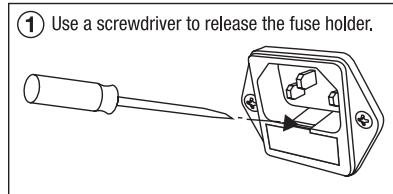

ROCKVILLE

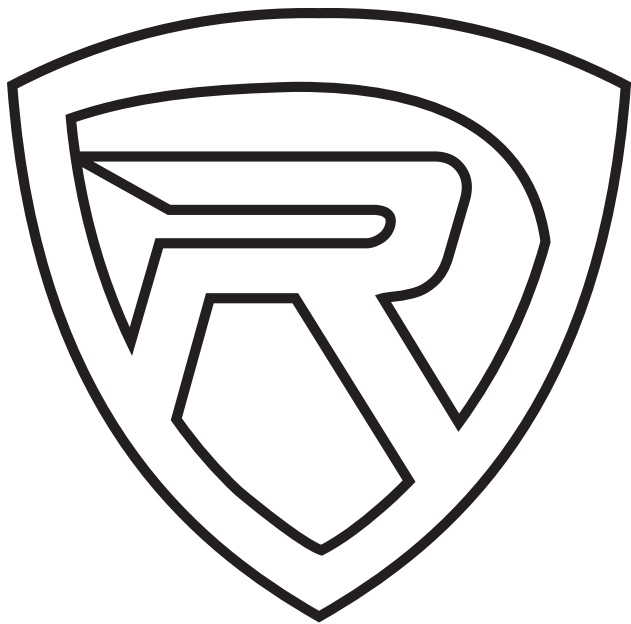 

RockvilleAudio.com

© 2023 ROCKVILLE // Features and specifications are subject to change and/or improvement without notice.