

ROCKVILLE

RKL65MBW OWNER'S MANUAL




Please read this guide carefully for proper use of your RKL65MBW 6.5" 2-way Marine Speakers with LED lights. Scan the QR code or go to rockvillesupport.com/rkl65mbw to access how-to video(s), the owner's manual, and other important information you may need to get the most out of these speakers. Should you need assistance please call our technical help line at 1-646-758-0144, 24 hours a day/7 days a week.

INSTALLATION/WIRING


1

Determine installation location.
(example)

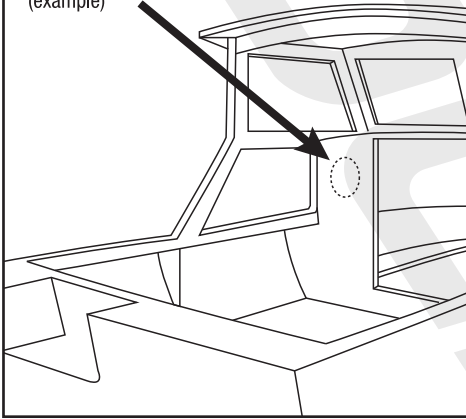


2

Mount the cutting template at the installation location

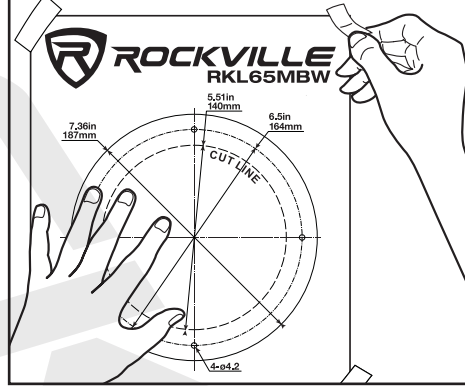


3

Use the drill to make the mounting holes, being careful to not rip the template.

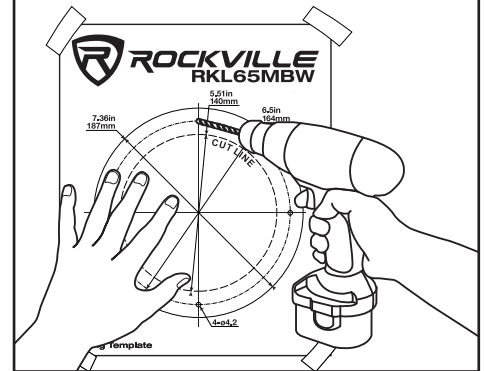


4

Use a utility knife or any other appropriate tool to cut out the mounting hole.

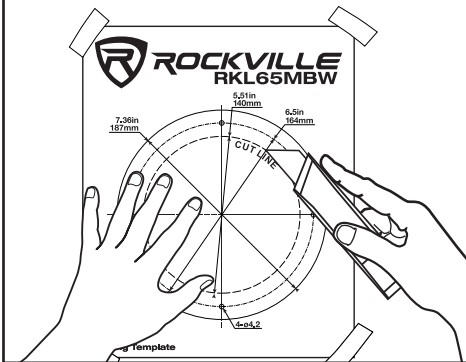


5

Connect the speaker wires. The left terminal is Negative (-), the right terminal is Positive (+).

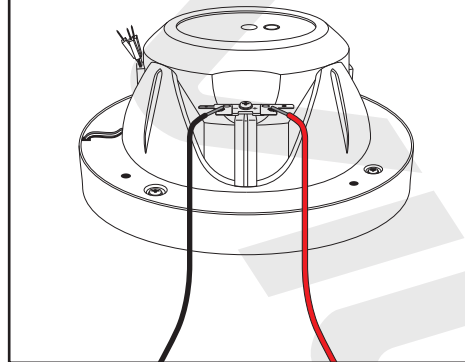


6

Change the speaker's LED color by using the included jumper (A) to connect the red and black wires for red (B) or the blue and black wires for blue (C).

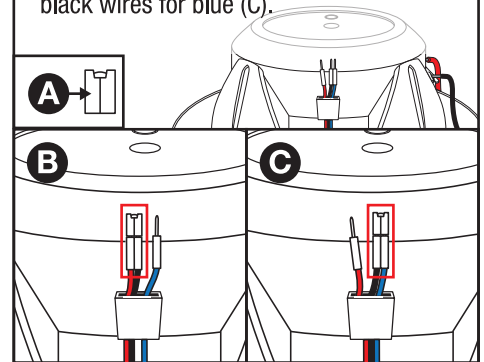


7

Carefully insert the speaker into the opening and use the included mounting screws to secure it.

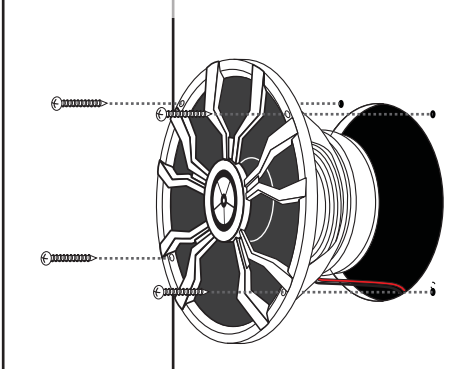

SPEAKER CONFIGURATION

! WARNING MAKE SURE THAT THE POSITIVE (+) AND NEGATIVE (-) SPEAKER WIRES ARE CONNECTED TO THE CORRESPONDING TERMINAL ON THE AMP.

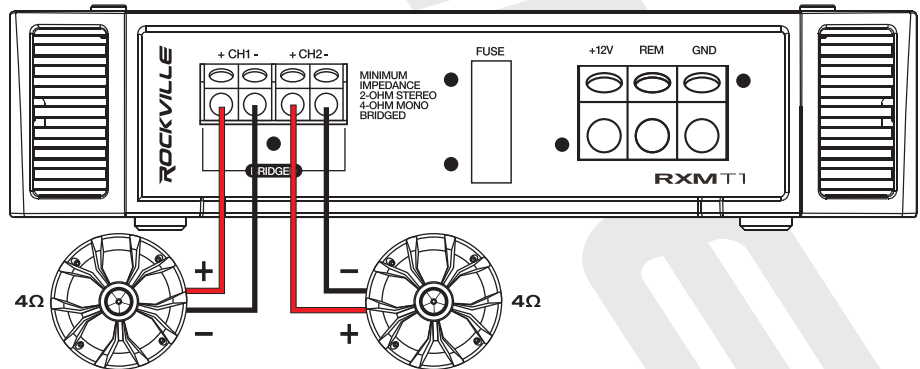

- Most speaker damage is caused by amplifiers with too much power (wattage).
- The proper way to set your gain is to turn your receiver volume to 75% of the max, and then slowly turn your gain up. The second you hear any slight distortion, turn it down one notch and leave it at that setting. Amps are not meant to be played with the gain up to the max. If this is the case, lower your gain slowly until you hear the amplifier stop clipping.