FEATURES

- 1. Fuse
- 2. Power connections. See wiring diagram for proper set up.
- 3. Electronic Bass Control.
- 4. RCA inputs.
- 5. Low pass cross over control. Allows for adjustment of low frequencies.
- 6. Gain control. Regulates the volume input to the pre amp stage.
- 7. Power/Protect LED indicator.



FUSE

EBC

LEFT RIGHT

GAIN


STATUS O

X OVER

W


GND PWR

RNIW8A CLASS D

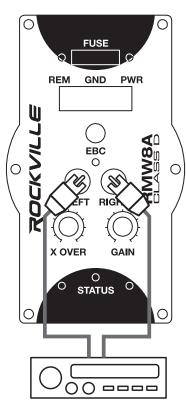

From Head Unit RCA output

WIRING

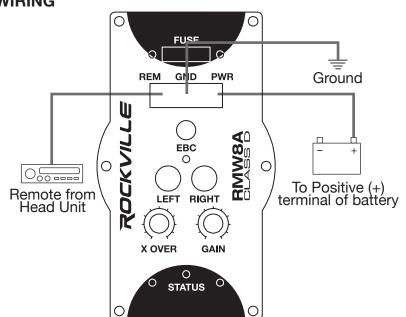

BASS CONTROL

