

# ROCKVILLE



OWNER'S MANUAL

## RPB24

RUGGED WATER RESISTANT PORTABLE  
BLUETOOTH SPEAKER w/POWERBANK

Thank you for purchasing this Rockville RPB24 Rugged Water Resistant Portable Bluetooth Speaker with Power-bank.

The RPB24 is a portable Bluetooth speaker that is the perfect size and power. This speaker is big enough that our engineers were able to get the speaker to produce 20 watts of power with huge bass! It is small enough to bring it with you camping, hiking, or anywhere else. The speaker is extremely rugged! It is shockproof and IPX5 water resistant. This means you can throw it around and bring it in the shower and the speaker will never break! Best of all, the RPB24 features a built-in power-bank that allows you to charge your phone, or other device through the USB port.

There may be some similar looking Bluetooth speakers on the market but this is the only speaker at this price point that is rugged, water resistant, and has huge power with huge bass!

Please read this guide carefully for proper use of your Rockville RPB24 Rugged Water Resistant Portable Bluetooth Speaker with Power-bank. Should you need technical assistance please call our technical help line at 1-646-758-0144, Monday through Friday, 9am to 5pm EST.

## IMPORTANT SAFETY INSTRUCTIONS



- To reduce risk of electric shock, never open the unit. There are no user serviceable parts, refer service to an authorized Rockville service center.
- Do not expose this unit to any kind of moisture.
- Please ensure that the unit is situated in a properly ventilated area.
- Make sure the unit is placed on a level and stable surface.

## ***Features and Specifications***

 
 
- Peak Power: 20 Watts/RMS Power: 10 Watts (continuous)
- IPX5 Water resistant
- Perfect for camping, hiking, pool, beach, shower, bedroom, iPad/Laptop speaker, kitchen, bedroom, and more
- Rechargeable 4000 mAh battery
- Charge Time: 5 – 6 hours
- Playback Time: 30 hours (@50% volume)
- Built-in power-bank allows you to charge your phone or other device through the USB port
- Compatible with popular apps like Pandora, Spotify, and others
- Playback Controls - Play, Pause, Skip Forward, Skip Back, Volume Up, Volume Down
- Bluetooth V4.2 with EDR/A2DP music streaming, 40ft range
- Automatically syncs with previously synced devices
- Built-in mic allows for hands-free calling
- Materials: ABS body, silicone, iron grill
- Impedance: 4 Ohms
- Frequency Response: 110Hz to 18KHz
- Distortion: <1%
- Dimensions: 6.65" x 2.95" x 1.81"
- Weight: 0.84 Lbs

## ***Included***

- RPB24 Bluetooth Speaker
- Aluminum Carabiner Clip
- Lanyard
- 3.5mm to 3.5mm AUX cable
- Micro USB Charging Cable
- Owner's Manual
- Warranty card

## Functions

1. Answer call
2. Previous/Volume -: Long press to change track, short press to decrease volume
3. Play/Pause: short press to play/pause music or answer a call, long press to reject incoming calls, double click to dial the last dialed number.
4. Unit status LED indicator
5. Charge status LED indicator
6. Mode button
7. Mic
8. Next/Volume +: long press to change track, short press to increase volume.
9. Micro SD card slot
10. 3.5mm Aux input
11. Micro USB charging port
12. USB power output
13. Power On/Off

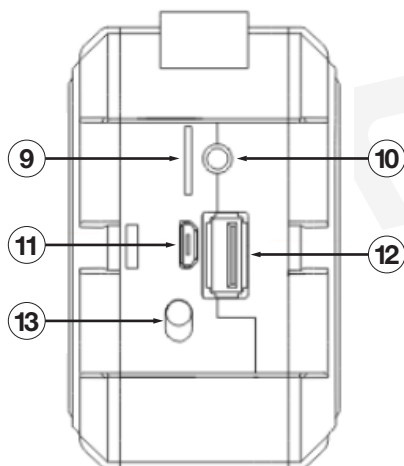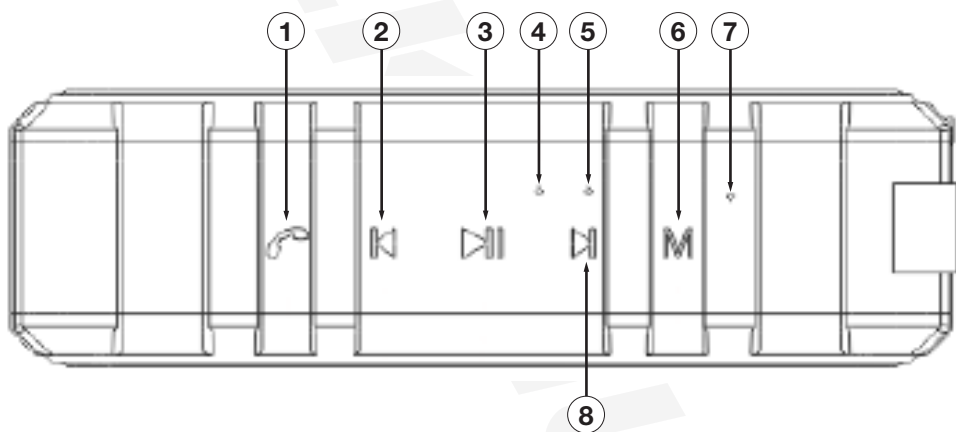

## ***Bluetooth Pairing***

1. Long press the power button to enter Bluetooth mode. Once in Bluetooth mode the LED indicator will be blue and blink rapidly.
2. Ensure your device is in Bluetooth mode, discoverable, and within 30cm (0.3ft) of the unit.
3. Under list of available devices search for and select RPB24.
4. If a pairing code is requested, please use "0000".

## ***Bluetooth Music***

Press the Previous/Volume - or Next/Volume + buttons at the top of the unit to lower or raise the volume. Long press the Previous/Volume - or Next/Volume + buttons to navigate through tracks.

## ***Bluetooth Hands-Free***

1. To answer a call press the Answer call button or short press the Play/Pause button.
2. Press the Play/Pause button to end a call.
3. Long press Play/Pause button to reject a call.
4. Double press the Play/Pause button to dialed the last dialed number.

## ***Micro SD***

1. Insert micro SD card into the slot located at the right side of the unit and push gently to lock the card in place. The speaker will automatically switch to SD mode.
2. Press the Previous/Volume - or Next/Volume + buttons at the top of the unit to lower or raise the volume. Long press the Previous/Volume - or Next/Volume + buttons to navigate through tracks.
2. To remove the card gently press the card to unlock it. The card will automatically come out.

## ***Aux Mode***

1. Plug the included 3.5mm to 3.5mm cable into the AUX port and the unit will automatically switch to auxiliary input.
2. Please note that connecting the AUX cable will end any ongoing calls.

## ***Charging***

Before you use the speaker for the first time, charge the battery for approximately 5 – 6 hours for optimum battery capacity and long life. The speaker will emit a tone when the battery is low and the speaker will automatically shut off within minutes. You may operate the speaker while charging.

1. Using the included USB cable, connect one end to the Micro USB port on the unit and the other to a computer USB port or any other USB charging device.
2. While charging the LED indicator will be red. Once fully charged the LED indicator will turn off.
3. Charge time is 5 – 6 hours.

## **Power-bank**

The RPB24 features a 4000mAh unit that can charge most devices that support USB charging. Simply plug the device into the USB power output port on the right side of the unit.

## **TROUBLESHOOTING**

<b>PROBLEM</b>	<b>SOLUTION</b>
No Power	<ol style="list-style-type: none"><li>1. Make sure the power switch is in the "ON" position.</li><li>2. Charge the unit for a minimum of 5 hours.</li><li>3. If using for the first time, charge the unit for 5 to 6 hours.</li></ol>
No Sound	<ol style="list-style-type: none"><li>1. Adjust the volume on your source device.</li><li>2. Make sure you have the correct audio source selected.</li><li>3. Make sure paired device is within 40 feet of the RPB24.</li></ol>
Bluetooth pairing fails	<ol style="list-style-type: none"><li>1. Check to see that both devices are turned on and that your Bluetooth device is discoverable.</li><li>2. Make sure you've selected the proper source.</li><li>3. Make sure that the Bluetooth device is within 30cm of the unit.</li><li>4. Move both devices away from other Bluetooth devices, microwaves, wireless routers, and other electronics.</li><li>5. Make sure that the unit is not paired to a previously paired device.</li></ol>
Bluetooth connection drops	<ol style="list-style-type: none"><li>1. Bluetooth selection is poor, move device closer to the RPB24 and remove any obstacles between them.</li><li>2. Some devices automatically disconnect as a power-saving feature. This does not indicate malfunction on the part of this device.</li></ol>

# FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Responsible party name: Rockville

Address: 600 Bayview Ave,  
Entrance A,  
Inwood, NY 11096

 
Hereby declares that the product Rockville RPB24 rugged water resistant portable Bluetooth speaker with power-bank complies with FCC rules as mentioned in the following paragraph:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

***ROCKVILLE***

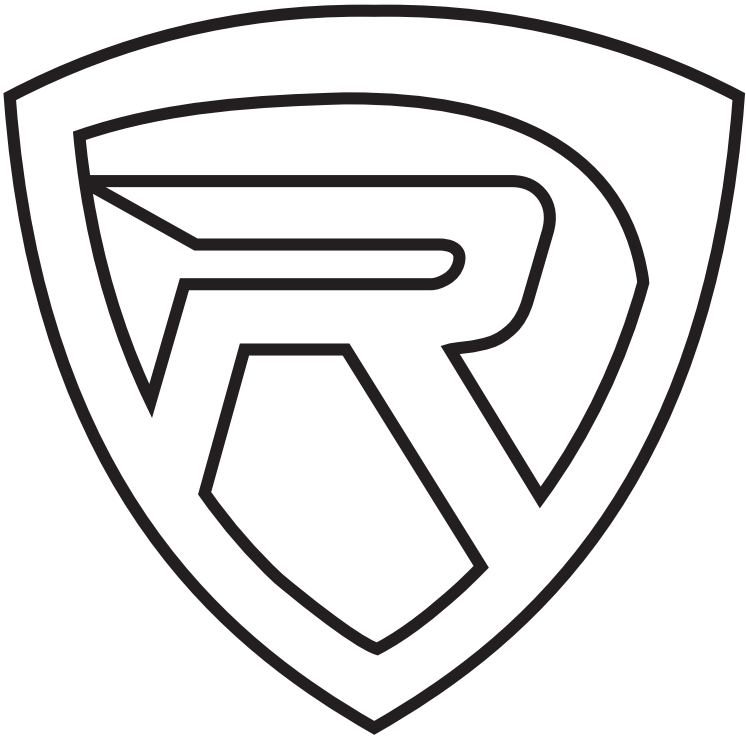

**RockvilleAudio.com**

© 2018 ROCKVILLE // Features and specifications are subject to change and or improvement without notice.