


ROCKVILLE RRF4

Assembly Instructions

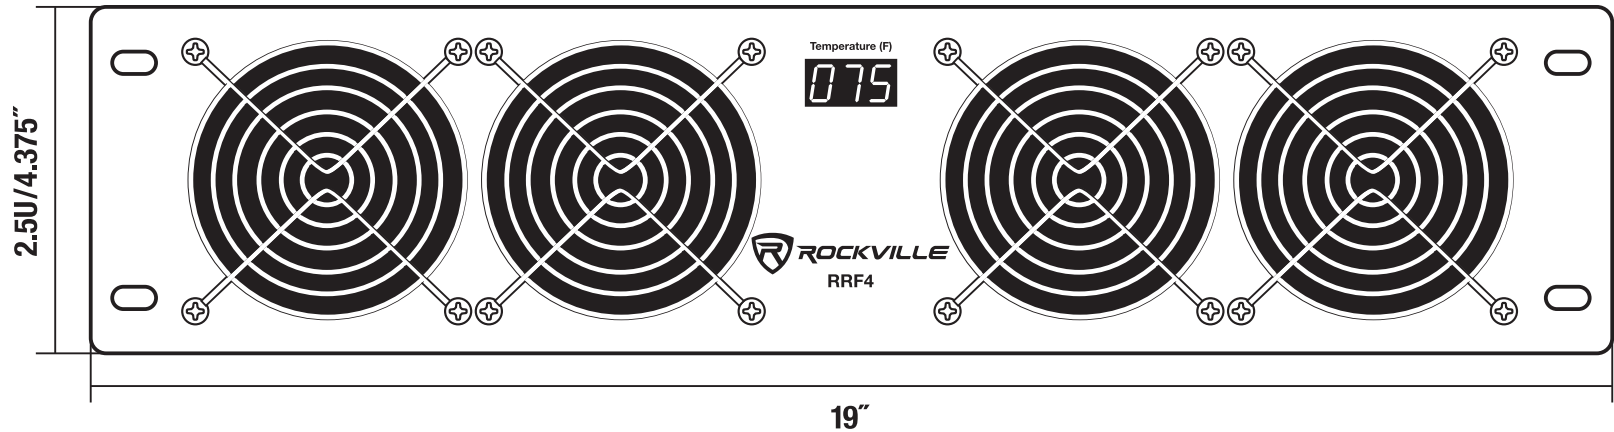

Thank you for purchasing the RRF4 Rack Mount 4 Fan Cooling System with LED Temperature Display. Please read these instructions carefully before use. If you have any questions or need assistance with your installation, please contact our technical help line at 1-646-758-0144, 24 hours a day/7 days a week. Scan the QR code or go to rockvillesupport.com/rrf4 to access how-to video(s) and other important information you may need to get the most out of your item.



Installation

Installing the RRF4 is quick and easy but there are some things you should know ahead of time in order to further facilitate your installation.

1. A rack space is 1.75" from top to bottom.
2. Equipment height is stated in Rack Units (1.75") and most rack mountable equipment's height is in multiples of 1.75". So, if a unit measures 1U that means that it is 1.75" tall, if it measures 2U then it is 3.5 and so on.
3. The standard width of most racks is 19".
4. Be sure to choose a proper depth rack.
5. Make sure your rack is properly balanced; mount heavier stuff at the bottom and lighter stuff at the top.
6. Make sure to allow for proper airflow.

