


ROCKVILLE

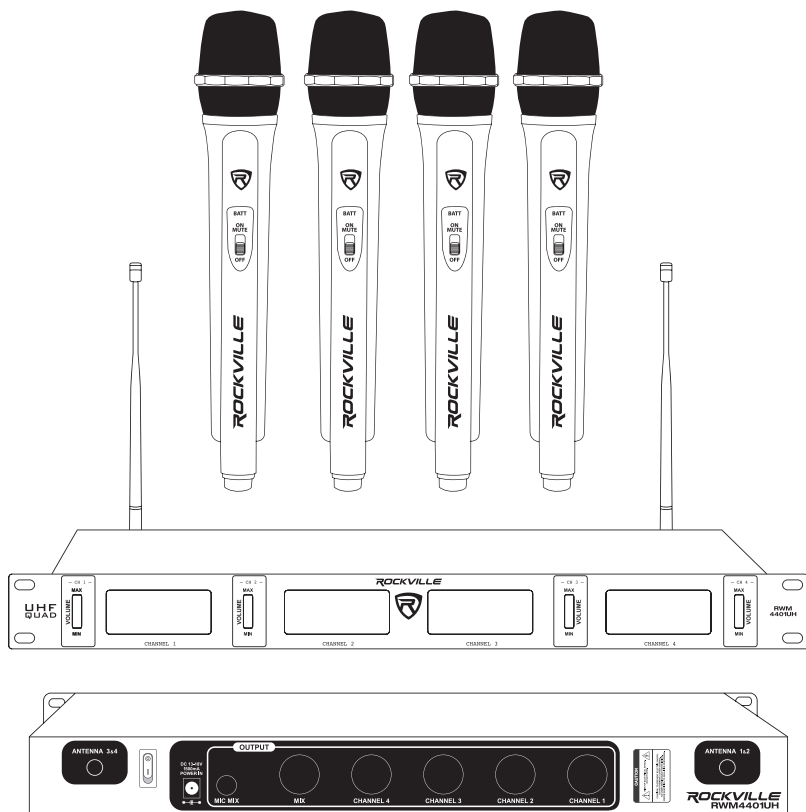

OWNER'S MANUAL

RWM4401UH

HIGH PERFORMANCE HAND HELD WIRELESS MICROPHONE SYSTEM

Who reads manuals?

Instead, go to vimeo.com/491763563 or scan the QR code and watch a short video, which shows you how to set this item up and how to use it.



ROCKVILLE

Thank you for purchasing this Rockville RWM4401UH Wireless Microphone System. Please read this installation guide carefully for proper use of your Rockville Wireless Microphone System. Should you need technical assistance, please call our technical help line at 1-646-758-0144, Monday through Thursday, 9am to 10pm EST., and Fridays, 9am to 3pm EST.

Table of Contents

Specs	1
Receiver (Front)	2
Receiver (Back)	2
Microphone	3
Receiver LCD Display	4
Setup and Operation	4
Troubleshooting	5

Specs

Operating Range: 300' – 400'(indoor), 250' – 350'(outdoor)

Channel: Four Channel

Frequency Range: 515MHz – 557MHz

Frequency Stability: $\pm 0.005\%$

Modulation Mode: UHF

Frequency Response: 50Hz – 15KHz(± 3 dB)

Dynamic Range: 110dB

S/N: 90dB

T.H.D.: $< 0.1\%$ (1KHz)

Audio Output Jack: XLR balanced & $\frac{1}{4}$ " unbalanced

Power Voltage: AC110V – 240V 50/60Hz



Operating Temperature: 14° F – 122° F

Mic Battery Operating Time: up to 10 hours

Includes: RWM4401UH transmitter with (4) hand held microphones, power cable, user manual, and warranty card

Tip:


To minimize feedback avoid operating the microphones in close proximity of or in front of speakers.

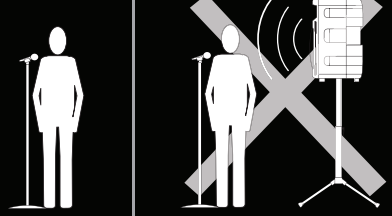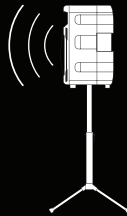

*Operating range is subject to environmental conditions.
Results may vary.


Receiver (Front)

- Antenna
 - Channel volume control
 - LCD screen
- Remember to remove protective plastic film

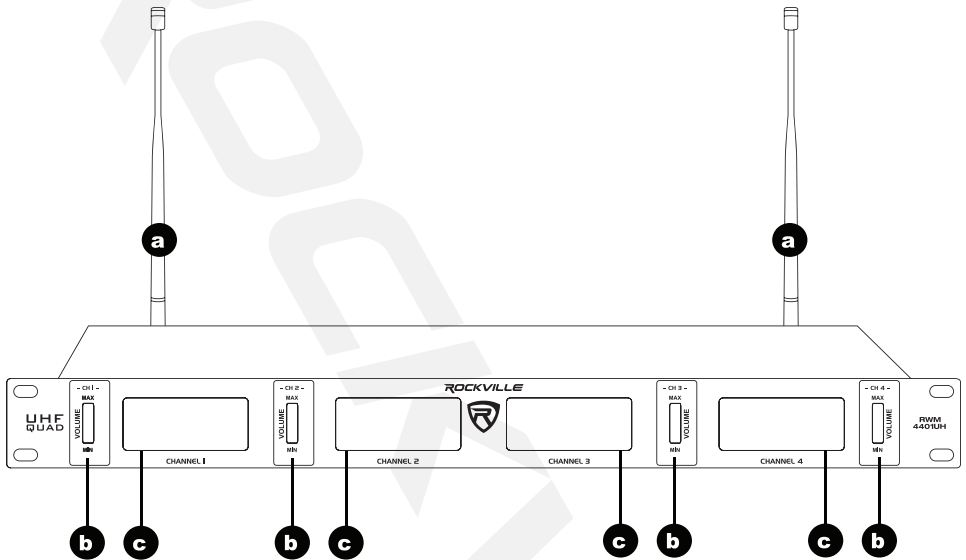


Receiver (Back)

- Antenna port
- Power ON/OFF switch
- Power input
- Microphone 1/4" unbalanced
- Microphone XLR mix output
- Channel outputs

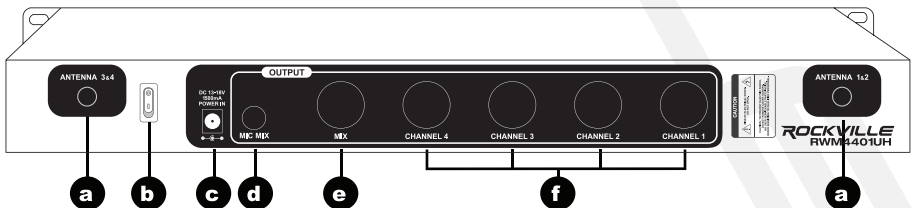

Handheld Microphone

- a. Microphone windscreen
- b. Power LED indicator
When battery power reaches 20% or less, the indicator will turn on
- c. Power ON/OFF switch
When the switch is in the middle position, the microphone will be on MUTE/ STANDBY
- d. Battery compartment
- e. Color coded base for each channel
- f. Microphone frequency sticker location is revealed after the removal of the battery compartment cover

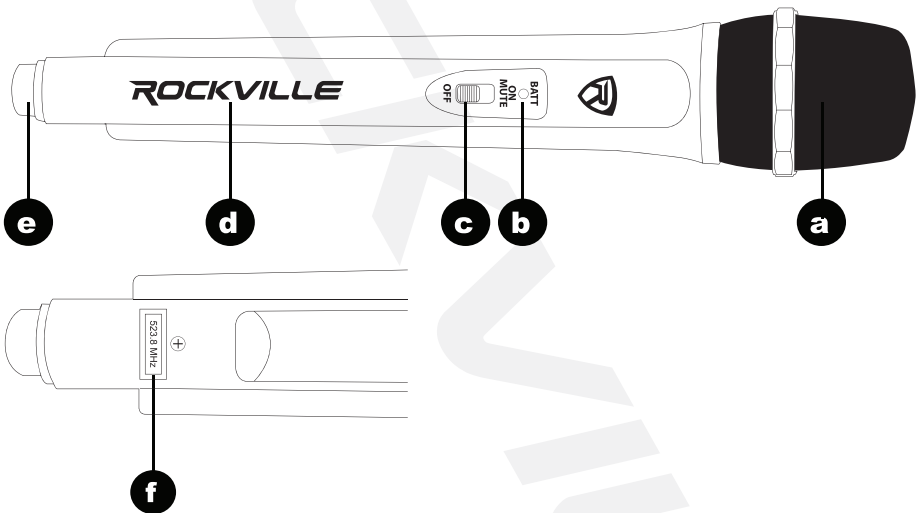


Frequencies

A	B	C	D
1 - 523.8 MHz	1 - 520.6 MHz	1 - 517.8 MHz	1 - 513.1 MHz
2 - 530.6 MHz	2 - 527.4 MHz	2 - 534.2 MHz	2 - 537.8 MHz
3 - 525.9 MHz	3 - 532.2 MHz	3 - 548.3 MHz	3 - 542.6 MHz
4 - 545.1 MHz	4 - 550.3 MHz	4 - 553.7 MHz	4 - 556.8 MHz

Receiver LCD Display


- Audio frequency
- Radio frequency
- Radio frequency strength is displayed
- Audio frequency level is displayed
- Appears when a channel is muted
- Channel frequency display

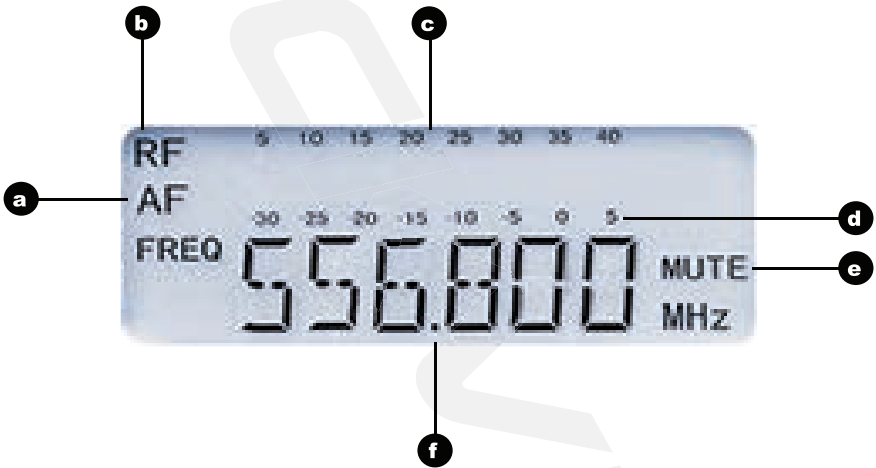

Setup and Operation

- The receiver should be placed in an area that is stable and least likely to shake the unit.
- The receiver should be at least 3' off the ground for optimal transmission.
- Connect the antenna, balanced cable AF line, and power supply provided.
- The antenna should extend vertically.
- Switch on the receiver.
- While the receiver is in stand-by, switch on the microphones.
- Adjust volume as necessary.

Problem	Solution
No sound or faint sound	<ul style="list-style-type: none"> • Verify all sound system connections or adjust channel volume as needed. • Verify that the receiver is connected to the mixer/ amplifier.
	<ul style="list-style-type: none"> • Turn on transmitter. • Make sure the batteries are installed correctly. • Charge or change battery.
	<ul style="list-style-type: none"> • Make sure AC adapter is securely plugged into electrical outlet. • Make sure receiver is powered on.
Audio artifacts or dropouts	<ul style="list-style-type: none"> • Change receiver and transmitter to a different group and/or channel. • Identify nearby sources of interference (cell phones, Wi-Fi access points, signal processor, etc...) and shutdown or remove source. • Charge or change transmitter battery. • System must be set up within recommended range and receiver kept away from metallic surfaces. • Transmitter must be used in line of sight from receiver for optimal sound.
Distortion	Reduce transmitter channel volume.
Sound level variations when switching to different sources	Adjust transmitter volume as necessary.
Transmitter information does not appear on the Receiver LCD	Transmitter is off.

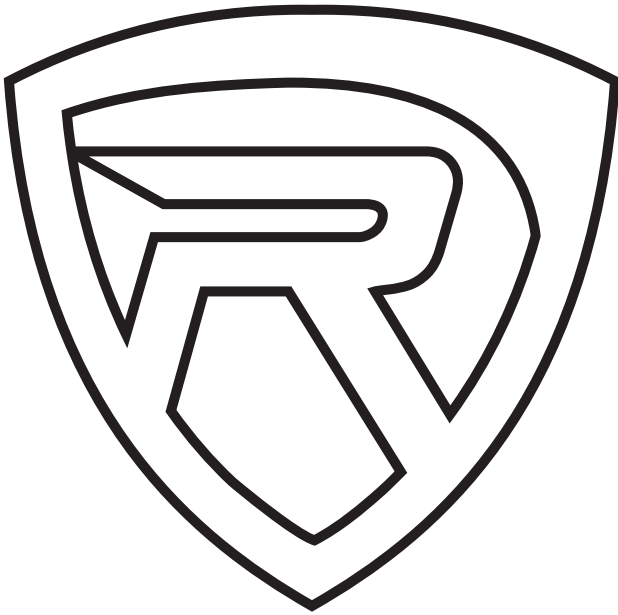

RockvilleAudio.com

© 2021 ROCKVILLE // Features and specifications are subject to change and/or improvement without notice.